



## FR6 SERIES

### Tank top return filters

The FR6 filters are available with various configurations:


- With or without inbuilt air breather
- With 2, 4 or 6 tank mounting holes
- With or without supplementary inlet ports
- Flow rate up to 300 l/min

## TECHNICAL INFORMATION

### HOUSING

tested according to NFPA T3.10.5.1 , ISO3968

HYDRAULIC SYMBOL:

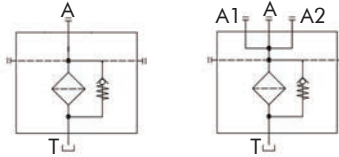

PRESSURE:

Max operating: 10 bar

CONNECTION PORTS:

Main ports: G 3/4" to 1 1/4"  
Additional ports (optional): G 1/2" to 1"

MATERIALS:

Head: aluminium alloy  
Bowl and top cover: PA6 reinforced  
Seals: NBR

BYPASS:

Inbuilt in the filter element  
B version 1,7 bar  
C version 3 bar

### ELEMENT

tested according to ISO 2941, 2942, 2943, 3968, 16889, 23181

FILTER MEDIA:

Inorganic microfiber G06 - G10 - G15 - G25  
Paper C10  
Metal wire mesh T60

DIFFERENTIAL COLLAPSE PRESSURE:

10 bar


OPERATING TEMPERATURE RANGE:

-25°C +100°C

FLUID COMPATIBILITY:

Full with HH-HL-HM-HV (acc. To ISO 2943).  
For use with other fluid please contact Filtrtec Customer Service  
(info@filtrtec.it).

## 2 MOUNTING HOLES

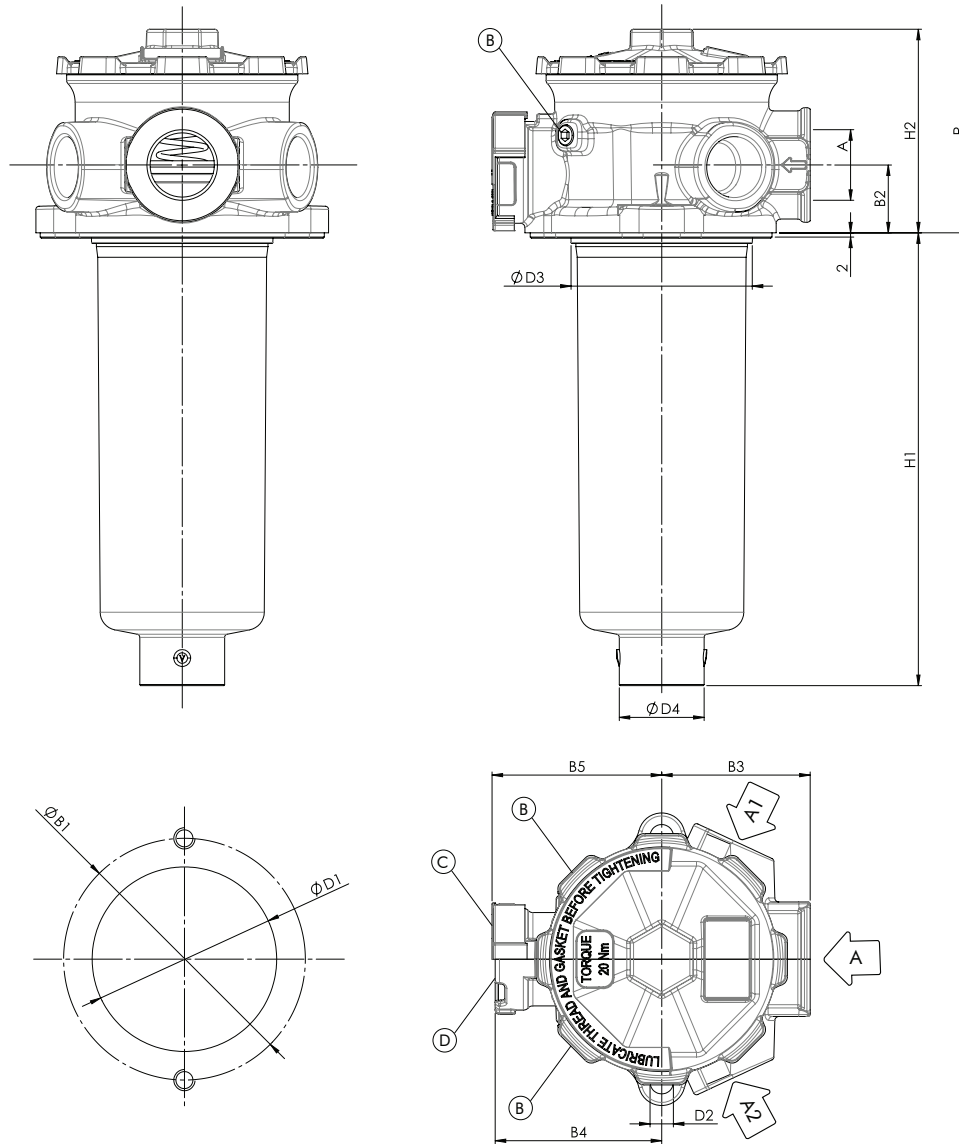


A1+A2= ON REQUEST ONLY  
 B= INDICATOR PORTS  
 C= VERSION WITH AIR BREATHER  
 D= VERSION WITHOUT AIR BREATHER

## NOMINAL SIZE

MODEL	A	A1-A2 OPTIONAL	Ø B1	B2	B3	B4	B5	Ø D1	D2	Ø D3	Ø D4	H1	H2	R	WEIGHT Kg
FR62R101												104	77	200	0,8
FR62R102	G 3/4"	G 1/2"	84 - 88	26	51	62	64	60 - 64	11	59	25	168	77	265	0,8
FR62R104												201	77	300	0,9
FR62R120												87	96	210	1,0
FR62R122	G 1"											132	96	260	1,0
FR62R130	G 1 1/4"	G 1"	114 - 116	32	70	78	80	87 - 91	11	86	40	214	96	340	1,1
FR62R131												318	96	440	1,2




4 MOUNTING HOLES

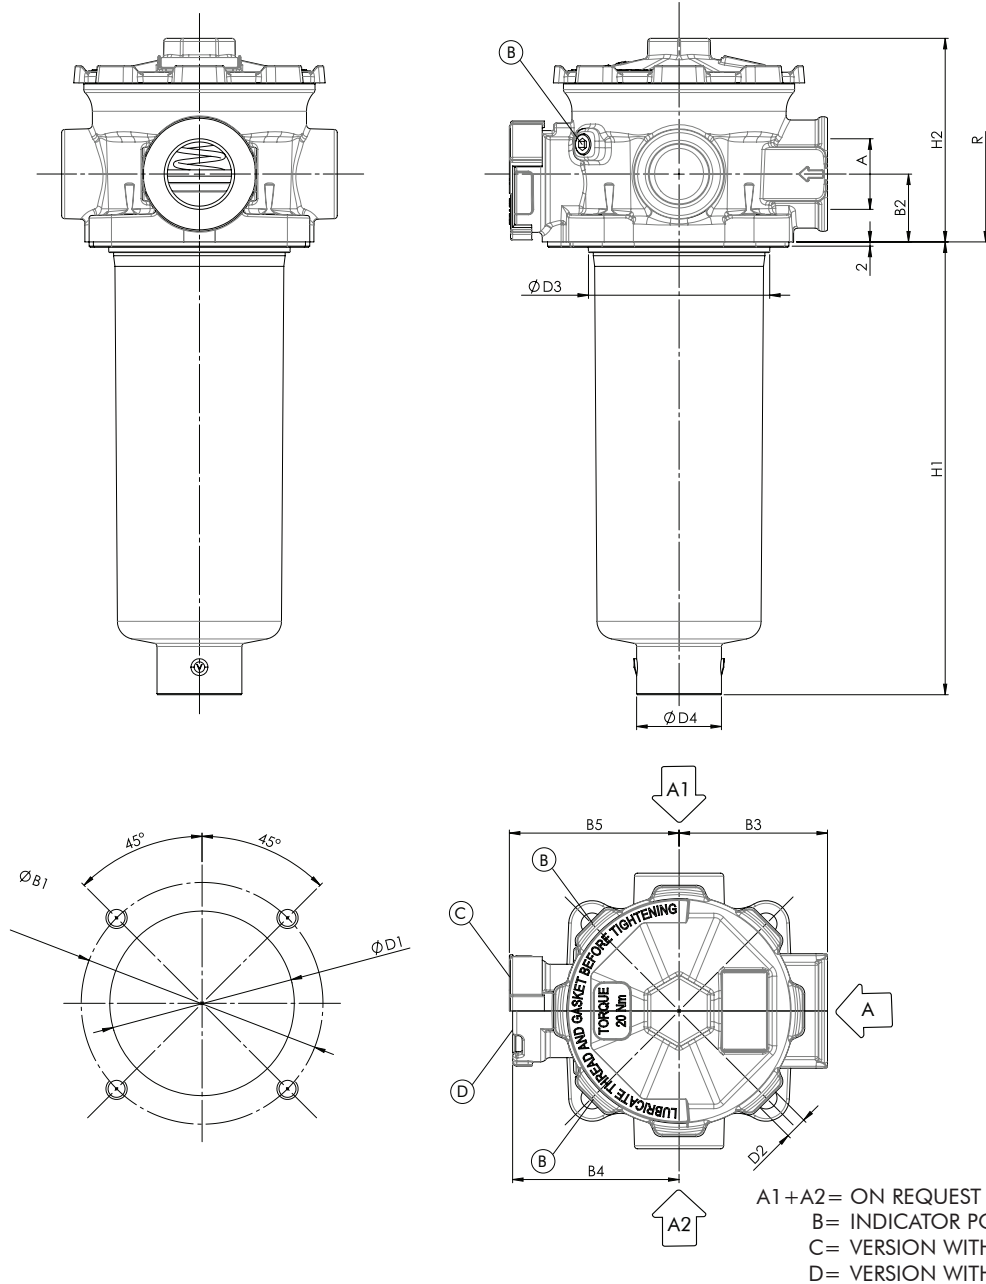

NOMINAL SIZE

MODEL	A	A1-A2 OPTIONAL	Ø B1	B2	B3	B4	B5	Ø D1	D2	Ø D3	Ø D4	H1	H2	R	WEIGHT Kg
FR64R101												104	77	200	0,9
FR64R102	G 3/4"	G 1/2"	84 - 88	26	51	62	64	60 - 64	11	59	25	168	77	265	0,9
FR64R104												201	77	300	1,0
FR64R120												87	96	210	1,1
FR64R122	G 1"											132	96	260	1,1
FR64R130	G 1 1/4"	G 1"	114 - 116	32	70	78	80	87 - 91	11	86	40	214	96	340	1,2
FR64R131												318	96	440	1,3

**6 MOUNTING HOLES** can fit both 2 or 4 holes tank mounting pattern

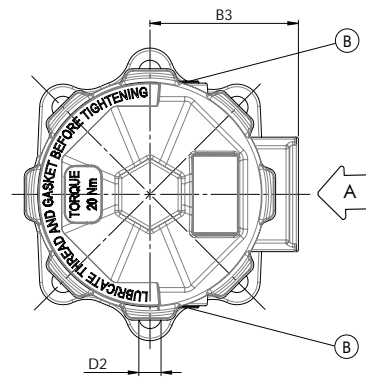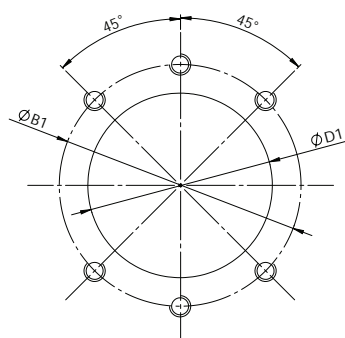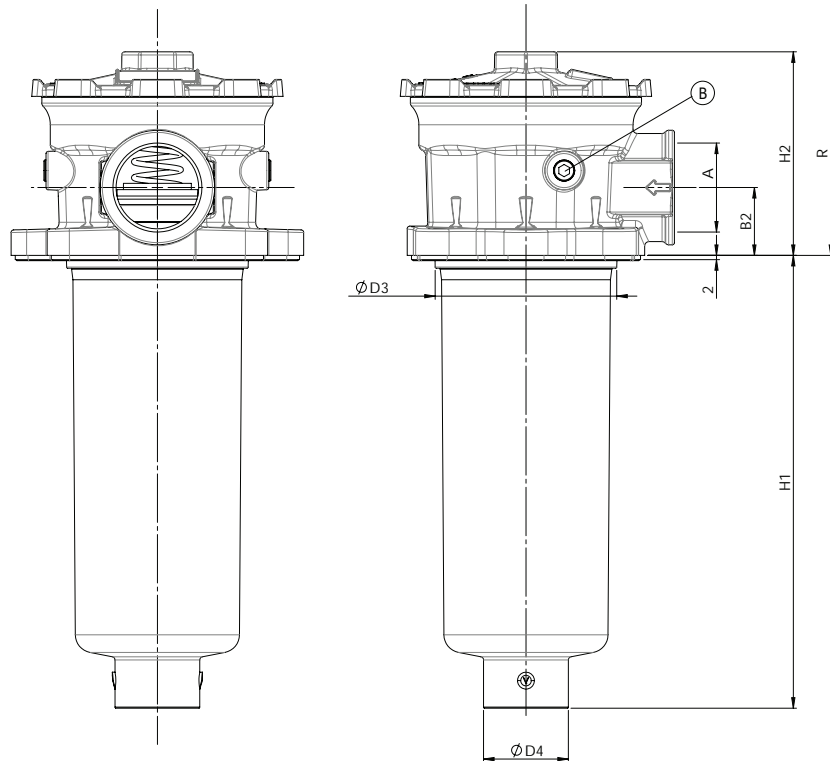

B= INDICATOR PORTS

## NOMINAL SIZE

MODEL	A	Ø B1	B2	B3	B4	B5	Ø D1	D2	Ø D3	Ø D4	H1	H2	R	WEIGHT Kg
FR66R120	G 1"	114 - 116	32	70	78	80	87-91	11	86	40	87	96	210	1,0
FR66R122											132			260
FR66R130	G 1 1/4"										214		340	1,1
FR66R131											318			440

## ORDERING INFORMATION

1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.
<b>FR6</b>	<b>2</b>	<b>R1</b>	<b>30</b>	<b>G15</b>	<b>C</b>	<b>B</b>	<b>B6</b>	<b>00</b>	<b>1</b>	<b>B</b>	<b>R9</b>
SPARE ELEMENT		<b>R1</b>	<b>30</b>	<b>G15</b>	<b>C</b>						

1. FILTER SERIES	FR6	
2. TANK MOUNTING HOLES	2	2 holes
	4	4 holes
	6	2 + 4 holes
3. FILTER ELEMENT SERIES	R1	
4. FILTER SIZE	01-02-04	(available for 2 and 4 holes version only)
	20-22-30-31	
5. FILTER MEDIA	G06	glassfiber $\beta_{7\mu\text{m(c)}} > 1.000$
	G10	glassfiber $\beta_{12\mu\text{m(c)}} > 1.000$
	G15	glassfiber $\beta_{18\mu\text{m(c)}} > 1.000$
	G25	glassfiber $\beta_{22\mu\text{m(c)}} > 1.000$
	C10	paper $\beta_{10\mu\text{m(c)}} > 2$
	T60	wire mesh 60 $\mu\text{m}$
6. BYPASS VALVE	B	1,7 bar (for paper and wire mesh elements)
	C	3 bar (for glassfiber elements)
7. SEALS	B	NBR
8. MAIN PORT	B4	G 3/4" (for size 01-02-04)
	B5	G 1" (for size 20-22-30-31)
	B6	G 1 1/4" (for size 20-22-30-31)
9. ADDITIONAL PORTS	00	no additional port
	B3	2 x G 1/2 (for size 01-02-04)
	B5	2 x G 1 (for size 20-22-30-31)
10. INBUILT AIR BREATHER	0	no air breather
	1	with air breather (not for FR66)
11. INDICATOR PORTS	B	2 x G 1/8"
12. CLOGGING INDICATORS	000	without indicator
	R9 (MPB)	pressure gauge (for "B" bypass)
	MPC	pressure gauge (for "C" bypass)
	R13 (PDB)	pressure switch (for "B" bypass)
	R14 (PDC)	pressure switch (for "C" bypass)
ACCESSORIES	LC24	LED connector for pressure switch
The accessories must be ordered separately	DS350	Dipstick
	ET0250	Extension tube 250 mm long (for size 01-02-04)
	ET0500	Extension tube 500 mm long
	ET2250	Extension tube 250 mm long (for size 20-22-30-31)
	ET2500	Extension tube 500 mm long
	B610F03	Spare air breather

## PRESSURE DROP ( $\Delta p$ ) INFORMATION FOR FILTER SIZING

The total Delta P through a filter assembly is given from Housing  $\Delta p$  + Element  $\Delta p$ .

The max recommended total  $\Delta p$  for return filters is 0,4 – 0,6 bar with clean element.


For multiport versions, the housing  $\Delta p$  to be considered is the sum of the  $\Delta p$  through all the ports that can be used contemporarily.

N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity at 40°C and density 0,875 kg/dm<sup>3</sup>.


## HOUSING PRESSURE DROP

The housing  $\Delta p$  is given by the curve of the considered model and port, in correspondence of the flow rate value.


**FR6x R101-02-04**

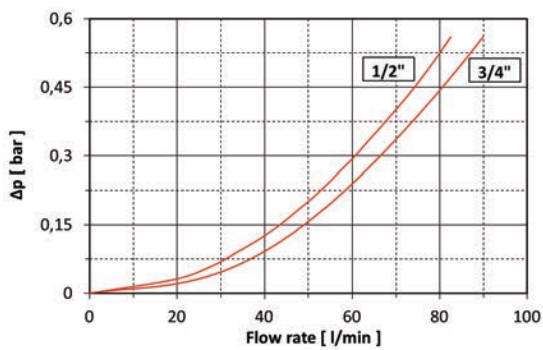

**FR6x R120-22**

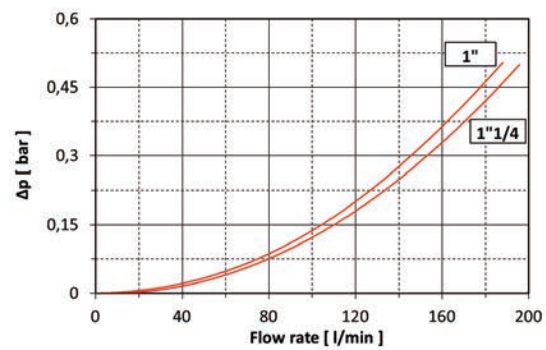

**FR6x R130-31**

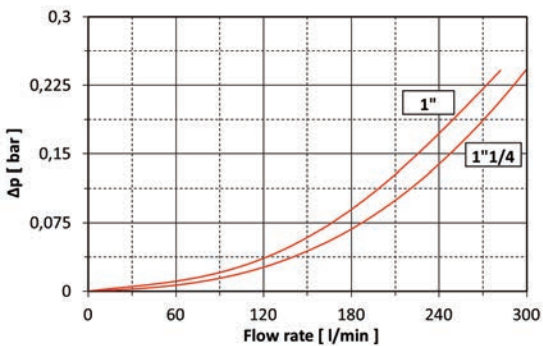

## ELEMENT PRESSURE DROP

The element  $\Delta p$  (bar) is given by the flow rate (l/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity  $V_1$  different than 32 cSt a corrective factor  $V_1/32$  must be applied.

Example: 80 l/min with R130G10B and oil viscosity 46 cSt  $> 80 \times 3,54/1000 \times 46/32 = 0,41$  bar

	G06	G10	G15	G25	C10	T60
R101	29,82	17,48	11,16	10,42	5,93	0,32
R102	15,19	8,64	5,49	5,06	2,88	0,35
R104	12,18	6,54	4,00	3,82	2,37	0,17
R120	15,39	10,77	7,02	7,15	5,52	2,15
R122	8,67	5,86	4,00	3,92	2,70	0,76
R130	5,66	3,54	2,29	2,25	1,64	0,49
R131	3,71	2,15	1,40	1,37	0,85	0,20

## EXAMPLE OF TOTAL $\Delta p$ CALCULATION


FR62R130G10BBB6001B000 with 80 l/min and oil 46 cSt:

Housing  $\Delta p$  0,01 bar + element  $\Delta p$  0,41 bar ( $80 \times 3,54/1000 \times 46/32$ ) = total assembly  $\Delta p$  0,42 bar


## BYPASS VALVE PRESSURE DROP

The bypass valve  $\Delta p$  is given by the curve of the considered model and setting, in correspondence of the flow rate value.

FR6x R101-02-04

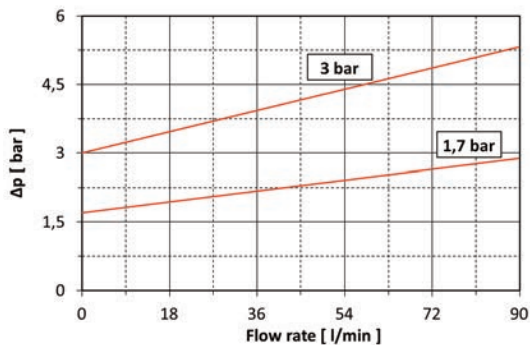


FR6x R120-22-30-31

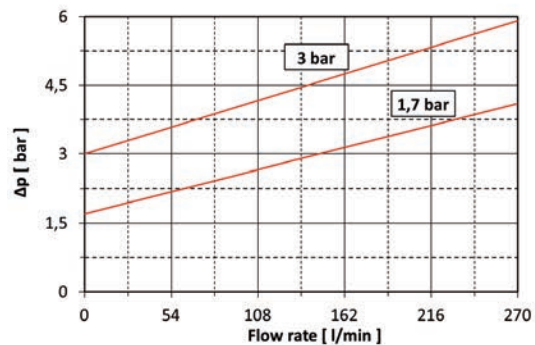

## ACCESSORIES

These accessories fit all our standard models and must be ordered separately.

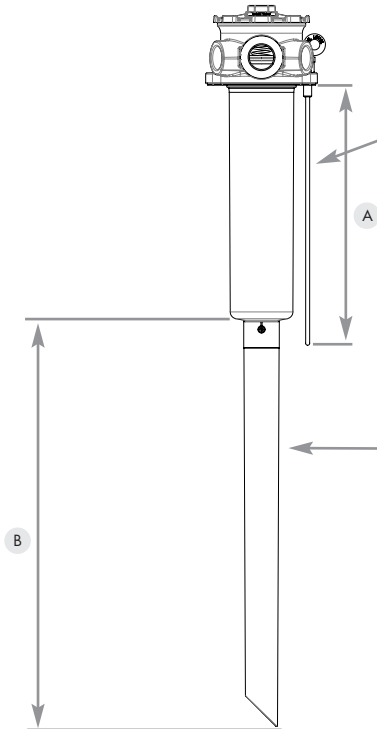

### DIPSTICK for oil level detection

When reduced space available, one of the tank fixing hole can be used for a dipstick to check the oil level; it is supplied with a M10 bolt support.

#### DIPSTICK

Part nr.	A
DS350	350


### EXTENSION TUBE

The flow from the filter must come out below the oil level to avoid possible generation of free air or foam. When necessary an extension tube can be fitted onto the knobs of the bowl end.

#### EXTENSION TUBE

	Part nr.	B
for size 01, 02, 04	ET0250	250
	ET0500	500
for size 20, 22, 30, 31	ET2250	250
	ET2500	500

## AIR BREATHER

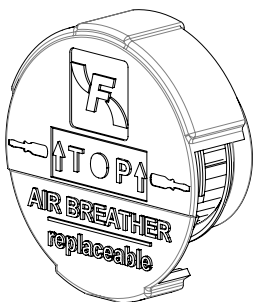

#### TECHNICAL DATA


FILTRATION	FLOW RATE	DELTA P	REPLACEMENT PART NR.
3 $\mu$ m	up to 300 NI/min	50 mbar	B610F03

N.B. we recommend to replace the air breather when replacing the oil filter element (when working in a very dirt environment, a more frequent air breather replacement could be necessary)



## OVERVIEW

FR6 return filters are available to fit 2 (FR62) or 4 (FR64) tank mounting patterns; FR66 can fit both mounting patterns.

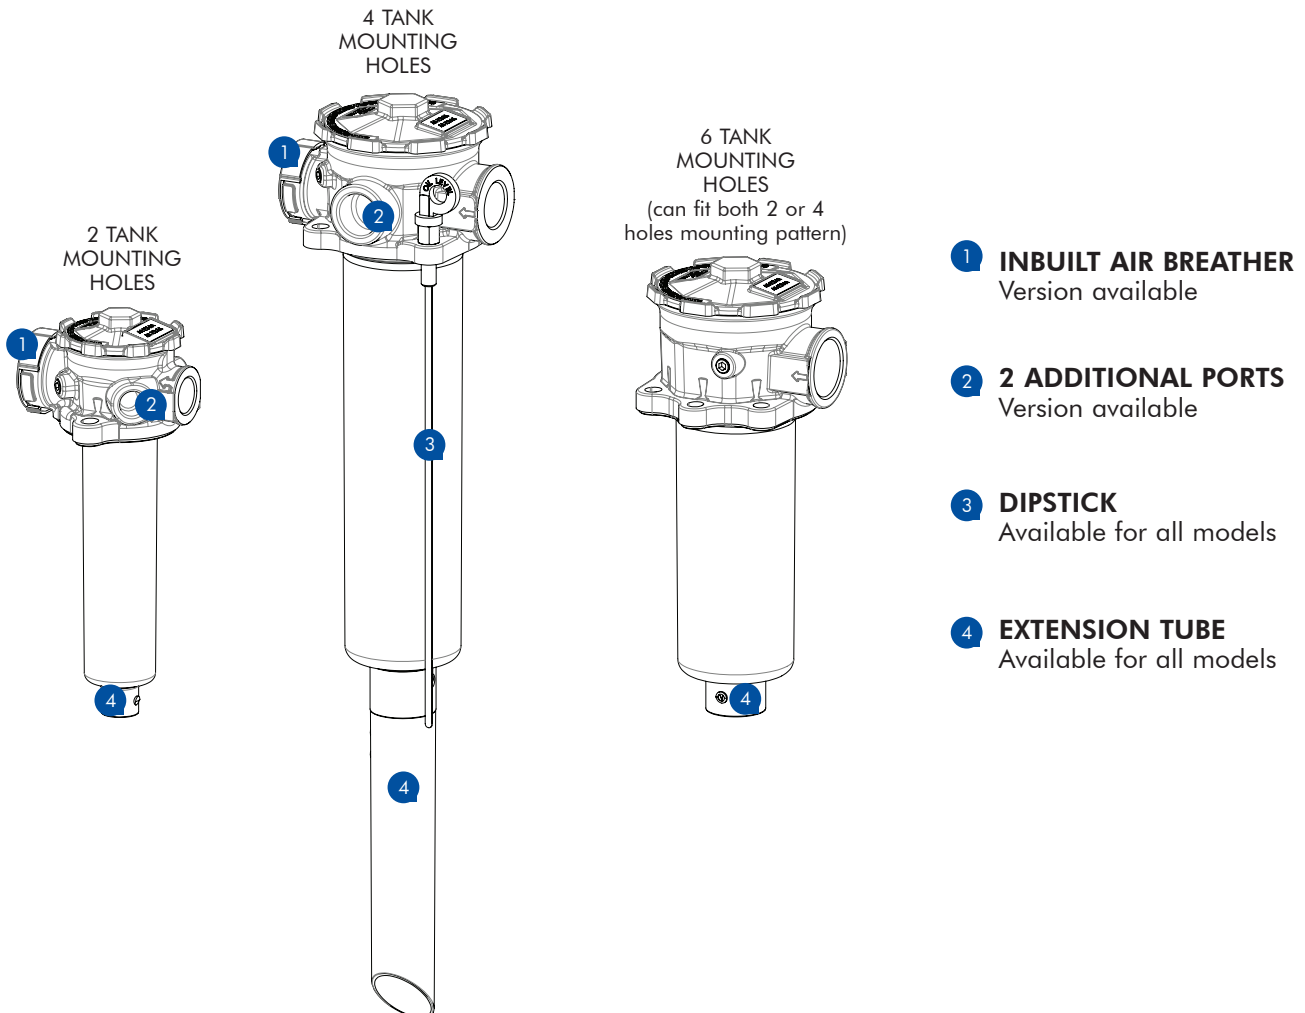

FR62 and FR64 are available in a version with inbuilt air breather for compact solution.

FR62 and FR64 are also available in multiport version with 2 extra IN ports for additional return flows in the same filter.

All the FR6 can fit as options:

- Extension tube to ensure flow outlet below the minimum oil level, thus avoiding formation of foam
- Dipstick for oil level detection, convenient in compact application avoiding the need of a side visual level gauge.

## USER TIPS




### COVER TIGHTENING TORQUE

20 Nm


### INDICATOR TIGHTENING TORQUE

10 Nm


## WARNING

-  Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.


## DISPOSAL OF FILTER ELEMENT

-  The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.



## INSTALLATION

1. the gasket (7) must be properly positioned and the head (6) well secured on the tank lid through the fixing holes
2. the hose must be properly connected to the IN port
-  3. the OUT port must be clear (an extension tube could be fitted, if needed for having the outlet below the oil level)
4. verify that no tension is present on the filter after mounting
5. when present the air breather (8), it must be in a protected position
6. enough space must be available for filter element replacement
7. the visual clogging indicator must be in a easily viewable position
8. when a electrical indicator is used, make sure that it is properly wired
9. keep in stock a spare FILTREC filter element for timely replacement when required

## OPERATION

-  1. the filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data sheet
- 2. the filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, oil temperature lower than 30°C, a false alarm can be given due to oil viscosity)
- 3. If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations

## MAINTENANCE

-  1. before removing the cover (1), ensure that the system is switched off and there is no residual pressure in the filter
- 2. unscrew the cover (1) by turning it anti-clockwise and remove it
- 3. remove the spring (2) first, then the dirty element (4) and the bowl (5)
- 4. clean the bowl (5) and fit a new FILTREC element (4), verifying the part number, particularly concerning the micron rating
- 5. when fitting the new element (4), open its plastic protection on the open end side and insert it onto the spigot in the filter bowl, then remove completely the plastic protection
- 6. check the O-ring (3) conditions and replace if necessary
- 7. put the spring (2) in its position on the filter element
- 8. screw the cover (1) by turning it clockwise, tighten at the recommended torque
-  9. the used filter elements cannot be cleaned and re-used



